



# User Manual

## Ethernet over COAX

### Controller / Endpoint / RP filter

Article				Article no.
EoC	Ethernet over COAX Controller / Endpoint / RP filter			383101
				383103
				383200
				383900
Version	1.2	Date	09/2018	EN


---

Safety Instructions.....	2
1. The EoC solution – unmanaged or managed via In Touch.....	3
Overview of components.....	4
EoC Controller.....	4
EoC Endpoint.....	5
EoC Return path (RP) filter.....	5
2. Standard configuration groups.....	6
Initial Setup.....	6
Private only.....	6
Guest only.....	6
Guest and Private.....	6
3. How to connect standard configuration groups.....	7
Private network.....	7
Guest network.....	7
IP TV network.....	7
4. Controller setup.....	7
Operation.....	7
Ports.....	7
Mounting.....	7
5. Endpoint setup.....	8
Operation.....	8
LEDs on endpoint.....	8
Reset.....	8
Mounting.....	8
6. Controller interface.....	9
Configuration wizard.....	9
Status.....	9
Network.....	10
System.....	12
Performance.....	13
7. Endpoint interface.....	13
Scan the QR code.....	13
8. Support.....	13

---

## Safety Instructions

### ATTENTION

 **Failure to comply** with the specified precautionary measures may cause serious injury to persons or damage to property. The installation and commissioning may only be performed by suitably qualified persons, technicians or installers in compliance with safety regulations. Damage due to improper installation and commissioning, defective connectors on cables or any other incorrect handling will void the warranty.

CAUTION: The safety requirements are according to EN 60728-11 and must be observed.

- Disconnect mains power before working on electrical systems.
- Any additional electrical wiring requirements should always be installed by a suitably qualified person(s).

Installation or service work should NEVER be undertaken during electrical / thunderstorms.



#### To prevent fire, short circuit or shock hazard

- Do not expose the unit to rain or moisture.
- Install the unit in a dry location without infiltration or condensation of water.
- Do not expose it to dripping or splashing..
- If any liquid should accidentally fall into the cabinet, disconnect the power plug.



#### To avoid any risk of overheating

- Install the unit in a well aired location and keep a minimum distance around the apparatus for sufficient ventilation
- Do not place anything on the unit that might cover the ventilation holes.
- Do not install the product in a dusty place
- Use the apparatus only in moderate climates (not in tropical climates)
- Respect the minimum and maximum temperature specifications



#### To avoid any risk of electrical shocks

- Attach protective earth connection to apparatus
- The mains plug shall remain readily operable
- Pull out power plug when making connections of cables
- To avoid electrical shock, do not open the housing.



#### To avoid interferences with LTE services in Europe

- Do not select a channel higher than UHF 48 in countries with LTE II / 700 operation
- Do not select a channel higher than UHF 60 in countries with LTE I / 800 operation
- Use coaxial cables with screening effectiveness of >85dB (Class A) at least or >95dB (Class A+)



#### WEEE disposal



This product may not be disposed of with general household waste  
Follow applicable national legislation when disposing of this product

# 1. The EoC solution – unmanaged or managed via In Touch


Ethernet over Coax (EoC) allows the configuration of ethernet transport layer 2 traffic via a coax network in coexistence with TV signals.

EoC is a straightforward system, well suited for retro-fitting into an existing coax installation with no or minor modifications. With this solution the user is given raw WiFi.

EoC can also be used in combination with a TRIAX In Touch managed solution to add layer 3 functionality.

This gives the user a managed In Touch solution where the WiFi bandwidth per device can be controlled; as well as providing a range of value added services.

For In Touch solutions, see separate information here: <http://www.triax.com/intouch>

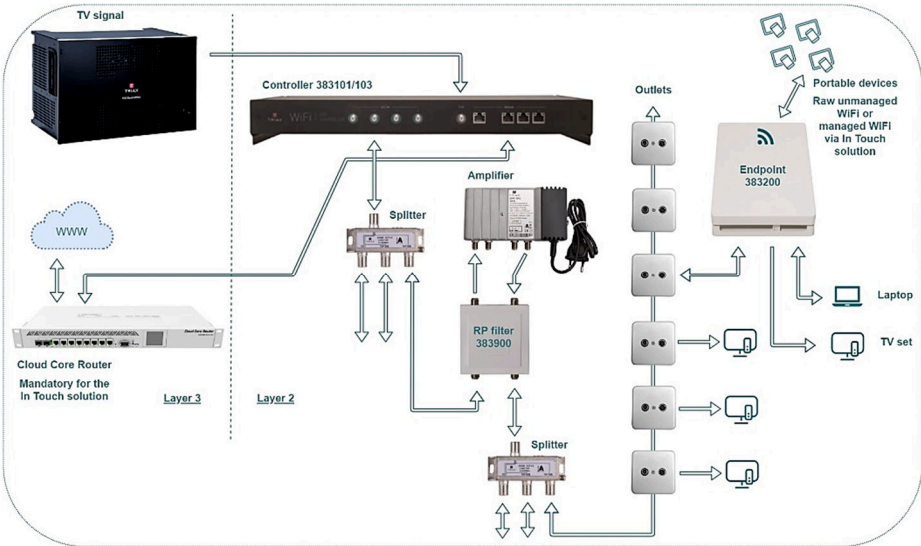

## Overview of components

To install the EoC controller and endpoints it is recommended to use the following process:

Start with the controller


- Use the controller interface to configure the system as needed or use the standard configuration (see paragraph "8. Controller interface")
- Mount the controller
- Attach cabling to controller

Then install endpoints


- Mount the backplate of the endpoint
- Attach cabling to endpoint
- Click in the inner box of the endpoint and wait for the LEDs to show that the endpoint is up and running
- Log onto the setup WiFi (TriaxSetup\_XXXX)
- Scan the QR code on the endpoint, to get a link to the endpoint installation page and open this in a browser
- Choose the configuration group needed for the endpoint and fill out the text fields
- Attach the lid of the endpoint and you are done.

Using this process will allow for easier configuration of the endpoints, as the specific configuration groups have already been set up and there is no need for individual setup of the endpoints, just choose the correct configuration group and you are done.


## EoC Controller

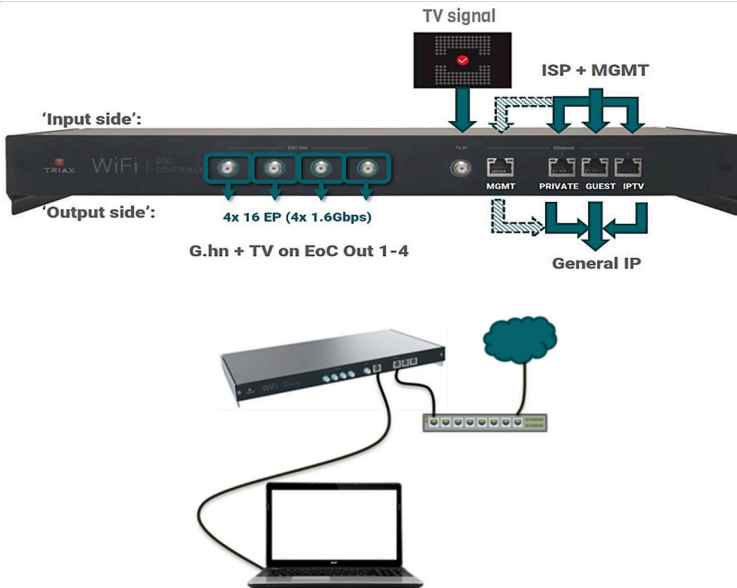

## EoC Endpoint

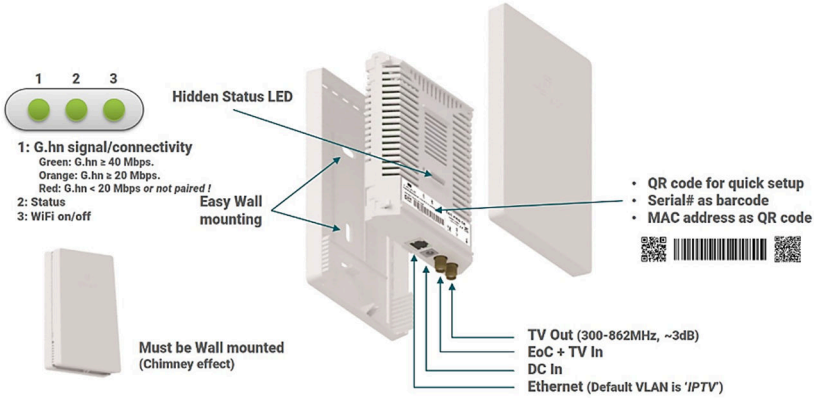

## EoC Return path (RP) filter

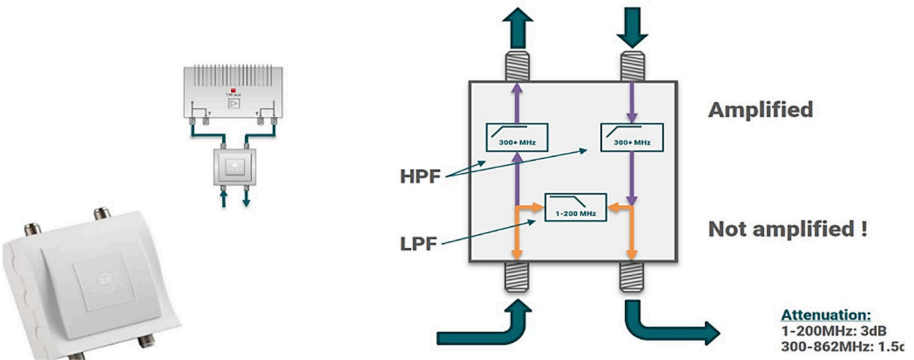

## 2. Standard configuration groups

The EoC controller and the endpoint comes with standard configuration groups. These can be used if you do not need any further WiFi SSIDs or configuration of ethernet ports.

### The standard configuration can be used in any network where there is a need for

1. A private network, where clients must be able to communicate with each other. This could be printing from a PC to a network printer or a PC needs to get files from a local server etc.
2. A public guest network, where clients cannot see each other (client isolation active). This allows for a public WiFi, where guests cannot access others devices in the EoC system.
3. IP TV distribution

### The standard configuration on the controller is as follows

- Ethernet port 1: Fixed for management port (VLAN 10)
- Ethernet port 2: Private network (VLAN 50)
- Ethernet port 3: Guest network (VLAN 100)
- Ethernet port 4 : IP TV (VLAN 80)

All inbound traffic on the ethernet ports are tagged with the appropriate VLAN.

The controller is set up with the four standard configuration groups (Setup, Private, Guest, Guest & Private) as a default.

A configuration group is a specific configuration used for the endpoints. A configuration group defines how an endpoint is set up with WiFi, VLANs, port tagging.

This allows for simple configuration of an endpoint by assigning it to a group instead of applying all settings individually.

The four configuration groups are described below

### Initial Setup

This is a group that is used only for initial setup of the endpoint.

All new endpoints will by default be configured with this group.

An endpoint in this group broadcasts the TriaxSetup\_xxxx WiFi SSID, which allows you to connect to the controller to configure an endpoint. It sets the endpoint up as follows:

- VLAN 10 on ethernet port (Use to access the controller interface)
- SSID: TriaxSetup\_xxxx (VLAN 10)

### Guest only

This is a group for a public guest network. It sets up the endpoint as follows:

- VLAN 80 on ethernet port (Mainly used for IP TV – but basically a private VLAN)
- SSID: Guest (VLAN 100, with client isolation)

### Private only

This is a group for a private VLAN. It sets up the endpoint as follows:

- VLAN 80 on ethernet port (Mainly used for IP TV – but basically a private VLAN)
- SSID: Private (VLAN 50)

### Guest and Private

This is used for an endpoint which serves both private and public WiFi. It sets up the endpoint as follows:

- VLAN 80 on ethernet port (Mainly used for IP TV – but basically a private VLAN)
- SSID: Private (VLAN 50)
- SSID: Guest (VLAN 100, with client isolation)

### 3. How to connect standard configuration groups

#### Private network

Connect a CAT cable from your router/modem to port 2 on the controller.

This will allow any endpoint with the "Private only" or "Guest & Private" configuration to send out a WiFi (SSID Private) with Internet.

On this network, devices can communicate with each other.

This Private network uses VLAN 50.

#### Guest network

Connect a CAT cable from your router/modem to port 3 on the controller.

This will allow any endpoint with the "Guest only" or "Guest & Private" configuration to send out a WiFi (SSID Guest) with Internet.

On this network, it is not possible for devices to see each other or share data, as client isolation is activated.

This Guest network uses VLAN 100.

#### IP TV network

Connect IP TV signal to ethernet port 4 on the controller. This will then be sent out on the ethernet port of any endpoint with the "Guest only", "Private only" or "Guest & Private" configuration. This IP TV network uses VLAN 80.

### 4. Controller setup

#### Operation

The controller acts as a layer 2 switch with a built in media converter.

Therefore, it is intended that a router is connected to the controller ethernet ports, facilitating IP address management (DHCP) and providing Internet access.

#### Ports

The ethernet ports are described in the paragraph "2. Using the standard configuration".

The TV in port allows for TV signals in the 300-862 MHz range.

The EoC out ports communicate using network (data) signals on 2-200 MHz and send out TV signals on 300-862 MHz. The TV and network (data) signals will be split again at the endpoint.

Each EoC out port can support up to 16 endpoints. If more than 16 endpoints are connected to a single EoC out port, then any endpoints above the 16<sup>th</sup> connected will not function.

#### Mounting

Controller can be mounted and stacked in Rack (19HE), or wall mounted in any direction needed.

## 5. Endpoint setup

### Operation

Each endpoint has two RF ports, EoC + TV and TV out.

The EoC + TV port communicates using network (data) signals on 2-200 MHz and receives TV signals on 300-862 MHz.

The endpoint splits the signals into network data, accessible through ethernet and WiFi, and TV out.

### LEDs on endpoint

#### Signal

- No light: No network data connection to the controller.
- Flashing light: Communicating with the controller.
- Solid light: Network data connection to controller established.
- Colour Green: Good working connection.
- Colour Orange/Yellow: Connection issues (poor signal or authentication issues).
- Colour Red: Connection error (very poor signal).

#### Status

- No light: Endpoint is not powered on (main CPU not running).
- Flashing light:
  - Slow (1s frequency): Starting up or rebooting.
  - Fast (200ms frequency): Configuration synchronization or FW updating.
- Solid light: Endpoint is powered on.

#### WiFi

- No light: WiFi is turned off.
- Flashing light: Indicates an error state.
- Solid light: WiFi is turned on.

### Reset

A paper clips or similar can be used to press the reset button on the endpoint.

This will trigger a reboot and remove the configuration data on the endpoint.

After start up the endpoint will automatically download the configuration from the controller, corresponding to the group the endpoint is assigned to.

### Mounting

For optimal WiFi coverage and for optimal cooling, always mount the Endpoint vertically on a wall as shown.



## 6. Controller interface

It is possible to access the web interface by connecting a PC via ethernet to port 1 on the controller. Open a browser and type in <http://setup.eoc> and type in the admin username and password. By default this is admin/admin, but is usually changed through the configuration wizard.

### NOTE

After changing any settings, you must press the Save & Apply button, before the specific settings takes effect on the endpoint or controller.

In the top right corner of the controller interface you will see a red disk if there are settings that have been changed but not applied yet. If the disk is green all settings have been saved and applied.

Changes done in the configuration wizard are automatically saved and applied, after clicking "Finish" on the last page

### Configuration wizard

When accessing the controller interface for the first time, the configuration wizard welcome page will be shown. In case this is not automatically shown, it can be accessed at: [http://setup.eoc/config\\_wizard](http://setup.eoc/config_wizard)

At the configuration wizard welcome page you have the possibility to choose either:

- Configuration wizard: this will take you through the most common configuration options:
  - Administrator account settings
  - Checking internet connection
  - Firmware update
  - Date & time settings
  - Restore/import configuration from backup
  - G.hn filters (*filter settings, filter setup ?*)
  - WiFi settings
  - Configurations groups
- Configure manually: skip the configuration wizard

### NOTE

After completion of the configuration; the wizard will not automatically be started again.

### Status

The system status page gives you an overview of the controller and the endpoints connected to the controller.

The WiFi Clients status will show you which clients (if any) are connected to the WiFi of the endpoints. Ethernet clients status will show you which clients (if any) are connected to an ethernet port on the endpoints.

## Network

Change of settings of the network infrastructure, including the coax data connection.

### ➤ Management settings

Apart from the default controller management interface on ethernet port 1 (setup VLAN 10), it is possible here to allow management access through an additional VLAN (ethernet port) of your choice. Furthermore, you can configure IPv4 settings used for management.

### ➤ VLAN settings

This sub-page allows you to create any VLANs you need, which then can be configured on either WiFi SSIDs or ethernet ports.

The default VLANs can be changed or they can be deleted, if you prefer to create your own. The Setup VLAN cannot be deleted.

You can add a new VLAN by simply clicking 'Add'. Then type in the name you want and the VLAN number you wish to use (any number in the range 2-4095 can be used. VLAN 0 and 1 are reserved).

Checking the 'Client isolation' will prevent any network traffic to flow between clients connected to this VLAN in the EoC system. In such a VLAN the clients cannot see each other or interact unless this is done through an external (Internet) server. For the client isolation to work correctly, please ensure that any network infrastructure (routers and switches) connected to a client isolated VLAN of the EoC system also has a client isolation feature.

### NOTE

If you are using more than one VLAN for Internet, any router in front of the controller is required to have either different subnets configured for each VLAN and/or VLAN separation for the client isolation to work properly.

### ➤ WiFi settings

For WiFi radio settings see the "Endpoints settings" paragraph.

The WiFi settings allows to create multiple SSIDs to use on the endpoints.

The default SSIDs can be changed or deleted as needed, however the TriaxSetup\_XXXX SSID cannot be deleted.

The default SSIDs and their corresponding keys (passphrases) for authentication are listed below:

- TriaxSetup\_XXXX "SetupPasswordXXXX" (where "XXXX" are the last 4 characters of the controller management interface MAC address)
- Guest: "guestpassphrase"
- Private: "privatepassphrase"

You can add a new SSID by simply clicking 'Add new'. This allows you to create a new SSID with 2.4 and/or 5.0 GHz radios and the VLAN you prefer to use and the encryption needed.

If you choose to use encryption, you will need to enter a key (passphrase) for this SSID.

### ➤ Ethernet settings

These settings allows you to configure the specific ethernet ports.

The controller port 1 settings cannot be changed, as this is by default a management port for the setup VLAN (10).

The other controller ethernet ports can be configured as needed.

The controller ethernet is configured individually per port, and the endpoint ethernet port settings are configured as a table of rules.

Each rule can be assigned to an endpoint configuration group (see "Group settings").

This means that all endpoints within a certain configuration group will all have the same ethernet rule settings.

## Network

### ➤ Access VLAN

- All inbound traffic that does not already have a VLAN tag will be tagged with the access VLAN.

### ➤ Trunk VLAN

- All: Traffic tagged with any VLAN created in "VLAN settings" is allowed through the port.
- None: Traffic tagged with any VLAN is blocked/dropped.
- Only: Traffic tagged with the chosen VLANs is allowed through the port.

### ➤ DHCP filter

This setting is only available for endpoint rules. The filter will prevent rogue DHCP servers (routers) connected to the endpoint ethernet ports to assign IP addresses to clients in the network.

#### ➤ G.hn settings - Multicast configuration and IGMP

In case it is desired to use multicast traffic and IGMP/MLD capabilities, e.g. for IP TV, the parameters should be configured accordingly. For a generic multicast setup using IGMP, the configuration should be:

- Multicast Snooping type: IGMP
- Broadcast IGMP/MLD reports allowed: Yes
- Filter unknown multicast traffic: Yes
- IGMP Multicast ranges configuration: the IP addresses used for multicast must be within the range

If Multicast traffic and IGMP/MLD capabilities are not required, it is recommended for optimal performance to configure the following:

- Broadcast IGMP/MLD reports allowed: No
- Filter unknown Multicast traffic: No

### ➤ Notch filters

It is possible to change the frequency range used by the network data traffic.

The network data traffic will use the 2-200 MHz frequency range by default.

Adding a Notch filter and enabling it will remove the chosen range. Removing a range will allow for other traffic to utilize this range, but also lower the total bandwidth available for network data.

By default there is a predefined disabled FM radio notch filter in the configuration. This can be enabled in case it is desired to use the coax network for FM radio and network data signals at the same time.

All notch filters are configured using:

Start freq (kHz): This is the frequency you wish your filter to start. Please note this is in kHz and not MHz.

Stop freq (kHz): This is the frequency you wish your filter to stop. Please note this is in kHz and not MHz.

Depth: This is the attenuation of the network data signal. To completely avoid using the frequency range choose 100 dB (complete carrier removal). All other values will only attenuate the network data signal, and it will still be used for communication in the chosen frequency range.

### ➤ Group settings

A group setting is used to quickly assign a full configuration to an endpoint. A group setting is comprised of one or more WiFi SSIDs (if needed) and an ethernet rule to apply for the ethernet port on the endpoint.

The default groups can be changed or deleted as needed.

You can add a new Group by clicking the 'Add' button. Type in the name of your group, add as many WiFi SSIDs as you need and choose an ethernet rule for the ethernet port.

---

## Network

### ➤ Endpoint settings

It is possible to see all endpoints configured on the controller.

Endpoints which has just been connected will get the configuration from the Setup group, which means that they will broadcast a WiFi SSID called TriaxSetup\_xxxx and the ethernet port can be used to connect to the controller interface.

For each endpoint it is possible to configure the 2.4 GHz / 5 GHz radio settings individually. This includes adjusting the transmit (Tx) power, WiFi channel and the channel width as well as what WiFi modes are allowed.

---

## System

Here system settings not related to network settings can be changed.

### ➤ Date & time settings

You can choose to use the time servers already configured or add a new timeserver, if you wish to use a custom.

### ➤ Account settings

This is where you can change the login for the controller interface.

### ➤ Backup & restore

You can export the current configuration as a backup file. Backup files can also be imported, which will overwrite the current settings of the controller, and replace them with the settings in the backup file. Import will overwrite the current settings of the controller and replace them with the settings in the backup file.

When setting up multiple controllers in multiple locations, you could duplicate the settings, by setting up one controller, exporting a backup and then import that backup to other controllers.

You also have the possibility to reset the controller to the factory default configuration.

Remember that this not only affects the controller as any connected endpoints will now get the default configuration as well.

### ➤ Firmware update

This allows you to update the firmware used by the controller and endpoints. Any firmware applied to the controller will transfer to the endpoints.

### ➤ Logs & reports

Here you can export logs of what has been happening in the system or export an equipment file showing all equipment connected to the controller (including the controller).

### ➤ Reboot

Here you can manually reboot the controller. No changes will be made to configuration, the controller will shut down and boot back up.

---

## Performance

In the performance page, you can choose an endpoint and start a TCP traffic test. The results are listed in a table, including up and download speeds.

### ATTENTION

Be careful how to interpret the results! The test can't be used to validate the data rate throughput experienced by clients on WiFi or ethernet, as the data rate throughput available for the test is limited. Furthermore, any network data traffic (from other sources) can influence the results, as the coax medium and internal switching capabilities of the system are shared among devices. In case it is desired to validate the data rate throughput as experienced by clients, please use appropriate test equipment.

## 7. Endpoint interface

While connected to either the "TriaxSetup\_XXXX" WiFi SSID or to the controller management interface on ethernet port 1, you can scan the setup QR code on an endpoint. This will provide a link to access the endpoint installation page, hosted by the controller, for that specific endpoint. You need to enter the controller admin password to continue. (see paragraph 8. Controller interface)

The endpoint installation page can alternatively be accessed at <http://setup.eoc/endpoint/AA:BB:CC:DD:EE:FF> where "AA:BB:CC:DD:EE:FF" must be substituted with the endpoint MAC address found on the front label.

It is then possible to choose a configuration group for this specific endpoint, give it a name for reference, and optionally type in a location or description.

### NOTE

Because the endpoint installation page is hosted by the controller, it can't be accessed if the endpoint is not connected to the controller, even though the TriaxSetup\_XXXX WiFi SSID's is available

## Scan the QR code

While connected to the "TriaxSetup\_XXXX" WiFi SSID, you can scan the setup QR code on the endpoint. This will provide a link to access the controller setup page for that specific endpoint. You need to enter the controller admin password to continue.

It is then possible to choose a configuration group for this specific endpoint and write in a name and/or location.

## 8. Support

To get support, please access our support sites at <http://www.triax.com/b2buserregister>. You have to be a registered user in order to log in.



## Information and manuals:

Information og brugervejledninger:  
Information och manualer:  
Information und Bedienungsanleitungen:  
Informations et modes d'emploi:  
Información y manuales:  
Lisätietoja ja oppaita:  
információk és útmutatók:

**triax.com**

triax.dk - triax.se - triax-gmbh.de - triax.fr -  
triaxmultimedia.es - triax.uk  
triax.at – triax.hu

Subject to change without notice  
Änderungen vorbehalten  
Peut être sujet à modification sans préavis

